

MECHANICAL ADVANCE LOCKOUT PLATE PN 88363

Important: Read these instructions before attempting the installation.

Parts Included:

1 - Lockout plate

LOCKING OUT THE CENTRIFUGAL ADVANCE.

1. Remove the distributor cap and rotor.
2. Remove the advance components including the springs, weights, advance cam, and e-clips (Figure 1).
3. Install the lockout plate and the e-clips to secure the plate. The mechanical advance is now locked-out (Figure 2).

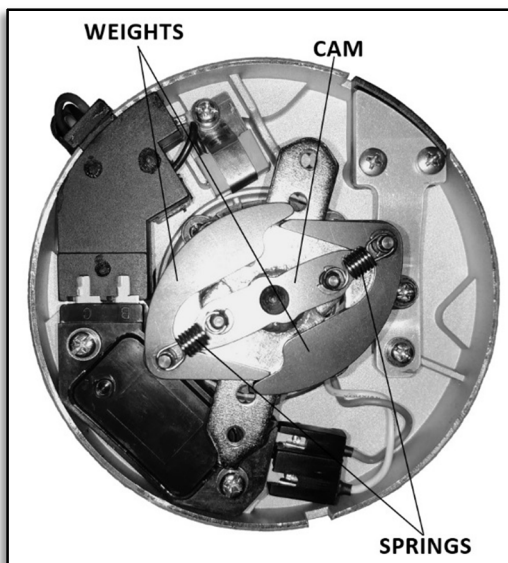


Figure 1. Centrifugal advance

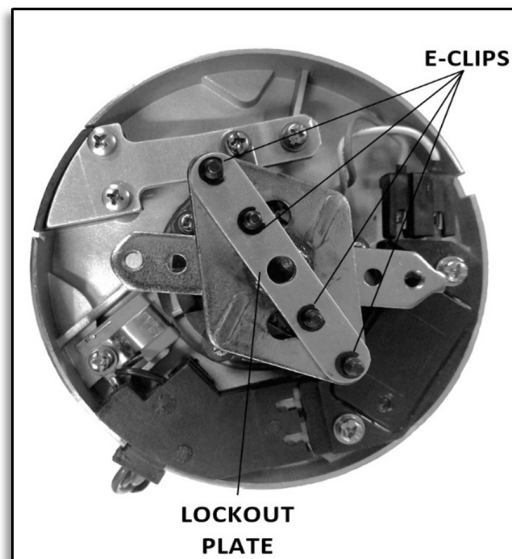


Figure 2. Lock out plate assembly.
**Some distributors may only use two e-clips*

